

MITSUBISHI

PROGRAMMABLE CONTROLLER

MELSEC-A

User's Manual

Digital-analog conversion module type A1S68DAV/DAI (Hardware)

INTRODUCTION

Thank you for choosing the Mitsubishi MELSEC-A Series of General Purpose Programmable Controllers. Please read this manual carefully so that the equipment is used to its optimum. A copy of this manual should be forwarded to the end user.



IB (NA) 66586-A

| | |
|--------------------------|---|
| The United States | Mitsubishi Electronics America, Inc. (Industrial Automation Division) 800 Biermann Court, Mt Prospect, IL 60055 Phone: (708)298-9223 |
| Canada | Mitsubishi Electric Sales Canada, Inc. (Industrial Automation Division) 4299 14th Avenue, Markham, Ontario L3R 0J2 Phone: (416)475-7728 |
| United Kingdom | Mitsubishi Electric UK Ltd. (Industrial Sales Division) Travellers Lane, Hatfield Herts., AL10 8XB Phone: (0707)276100 |
| Germany | Mitsubishi Electric Europe GmbH, (Industrial Automation Division) Gothaer Strasse 8, Postfach 1548 D-4030 Ratingen 1 Phone: (02102)4860 |
| Taiwan | Setsuyo Enterprise Co. Ltd., (106) 11th Fl., Chung-Ling Bldg., 363, Sec 2 Fu Hsing S Rd., Taipei, Taiwan R.O.C. Phone: (02)732-0161 |
| Hongkong (& China) | Ryoden International Ltd., (Industrial & Electrical Controls Division) 10/F., Manulife Tower 169 Electric Rd., North Point Hong Kong Phone: 8878870 |
| Singapore (& Malaysia) | MELCO Sales Shingapore Pte. Ltd., (Industrial Division) 307 Alexandra Rd #05 01/02, Mitsubishi Electric Bldg Singapore 0315 Phone: 4732308 |
| Thailand | F. A. Tech Co. Ltd., 1138/33-34 Rama 3 Rd., Yannawa, Bangkok 10120 Phone: (02)285 2861-4 |
| Australia | Mitsubishi Electric Australia Pty. Ltd., (Industrial Controls Division) 348 Victoria Rd., Rydalmere N.S.W. 2116 Phone: (02)684 7260 |
| Republic of South Africa | M S A Manufacturing (Pty) Ltd., (Factory Automation Division) P.O. Box 39733, Bramley, Johannesburg 2018 Phone: (011)444 8080 |

MITSUBISHI ELECTRIC CORPORATION
HEAD OFFICE: MITSUBISHI DENKI BLDG, MARUNOUCHI 4CHOME, TOKYO 100 JAPAN
TELE: 2632-8101 CABLE: MELCO TOKYO
NAGOYA WORKS: 1-14, YOKAWA 4CHOME, NAGUYA 460 JAPAN

When exported from Japan, this manual does not require application to the Ministry of International Trade and Industry for service transaction permission.

IB (NA) 66586-A (6/82) FPOD Printed in Japan

Specifications subject to change without notice

Cautions on Safety

(Please read before using the module)

Please carefully read this manual and related ones mentioned herein to ensure safety and operate this module properly.

The following cautions are applicable only to the module. For the cautions on safety relating to the PC CPU system, see the PC CPU User's Manual.

The cautions in this cautions on safety are classified into two ranks, "DANGER" and "CAUTION", according to their importance.

DANGER

A warning given when improper operation could result in a dangerous situation causing death or serious injuries.

CAUTION

A caution given when improper operation could result in a dangerous situation causing moderate or injuries, and physical damage to the module, etc.

Even failure to observe a caution marked CAUTION may bring about a serious accident depending on the situation. Do not fail to follow the cautions. Retain this manual for consultation whenever necessary, and provide a copy to the end user.

Cautions on Design

CAUTION

- Provide a failsafe circuit to ensure that the system as a whole can continue to function safely even if there is an external power supply fault or PC failure. Otherwise there will be danger of accidents due to erroneous outputs or misoperation.

- (1) The correspondence between analog outputs and the settings for the functions that control analog output are shown below. Check these settings carefully.

| Setting Combination | HOLD/CLEAR Setting | CLEAR | | | | HOLD | |
|---|---|------------------------------------|--------------|----------------|--------------|--|----------------------------|
| | | Enabled (ON) | | Disabled (OFF) | | Enabled (ON)/Disabled (OFF) | |
| Execution Status | DA Conversion Value Output Enabled/Disabled | Enabled (0) | Disabled (1) | Enabled (0) | Disabled (1) | Enabled (0) | Disabled (1) |
| | PC CPU in RUN status | DA conversion value output enabled | 0 V/0 mA | 0 V/4 mA | 0 V/0 mA | 0 V/0 mA | DA conversion value output |
| PC CPU in STOP status | | 0 V/4 mA | 0 V/0 mA | 0 V/4 mA | 0 V/0 mA | Analog value before STOP executed output | 0 V/0 mA |
| On occurrence of PC CPU error | | 0 V/0 mA | | | | | |
| On occurrence of remote I/O station link error (when installed in a remote I/O station) | | 0 V/0 mA | | | | | |

- (2) Normal outputs may not be obtained from output terminals or their internal circuits. Provide an external circuit to monitor output signals whose disruption could cause serious accidents.

CAUTION

- Do not bundle the control wire and the communication cable with the main circuit or power line or keep them close to one another. Keep the control wire and the communication cable at least 100 mm away from the main circuit or power line. Otherwise, noise or malfunctions will occur.

Cautions on Installation

CAUTION

- Use the PC in the environment specified in the General Specifications section in this manual. Using it in an environment which does not meet the general specifications could cause electric shock, fire or malfunctions, and damage or deterioration of the module.
- Install the module by engaging the module mounting projections on the lower part of the module in the mounting holes of the base unit. Incorrect installation could result in malfunctions, failure of detachment.

Cautions on Wiring

CAUTION

- Ground the FG terminal using third class grounding or higher exclusively for the PC. If you do not, the PC will malfunction.
- Before connecting wires to the PC, check the rated voltage and the terminal arrangement. Connecting power of a different voltage or wiring incorrectly will result in fire or failure.
- Tighten the terminal screws to the specified torque. Loose terminal screws will cause a short, fire or malfunctions.
- Take all possible measures to prevent chips or wire scraps from entering the module. Entry of foreign material will cause fire, failure of malfunctions.

[Cautions on Start-Up and Maintenance]

⚠ DANGER

- Do not touch the terminals while they are live This will cause malfunctions
- Switch the power off before cleaning the module or retightening the terminal screws If the power is left on, the module will break down or malfunction.

⚠ CAUTION

- Do not disassemble or tamper with the module This will cause failure malfunctions, injuries or fire
- Switch the power off before installing or removing the module. If the power is left on, the module will break down or malfunction.

[Cautions on Disposal]

⚠ CAUTION

- Dispose of the module as industrial waste.

1. GENERAL DESCRIPTION

1. GENERAL DESCRIPTION

This manual gives the specifications and handling instructions for the A1S68DAV digital to analog converter module (hereafter called the "A1S68DAV") and the A1S68DAI digital to analog current converter module (hereafter called the "A1S68DAI"), which are used in combination with a MELSEC A series compact building block type PC CPU (hereafter called the "PC CPU")

A1S68DAV is used to convert incoming digital values (16-bit signed binary data) which are set with the PC CPU to analog values (voltage outputs ranging from -10 V to 10 V)

A1S68DAI is used to convert incoming digital values (16-bit signed binary data) which are set with the PC CPU to analog values (voltage outputs ranging from 4 mA to 20 mA)

A1S68DAV and A1S68DAI are referred to as "A1S68DAV/DAI" or "module" in this manual

1.1 Related Manuals

The following manuals give the specifications, handling, and programming method for the A1S68DAV/DAI

A1S68DAV/DAI User's Manual (1B)

2. PERFORMANCE SPECIFICATIONS

2. PERFORMANCE SPECIFICATIONS

The performance specifications of the A1S68DAV/DAI are tabled below.

| Item | Specifications | | | |
|--------------------------------------|---|---------------------|---|---------------------|
| | A1S68DAV | | A1S68DAI | |
| Digital input | 2048 to 2047 | | 0 to 4096 | |
| Analog output | 10 to 0 to 10 VDC (External load resistance: 2 kΩ to 1 MΩ) | | 4 to 20 mA DC (External load resistance: 0 to 600 Ω) | |
| I/O characteristics | Digital input value | Analog output value | Digital input value | Analog output value |
| | 2000 | 10 V | 4000 | 20 mA |
| | 1000 | 5 V | 2000 | 12 mA |
| | 0 | 0 V | 0 | 4 mA |
| | -1000 | 5 V | | |
| | -2000 | 10 V | | |
| Maximum resolution of analog value | 5 mV | | 4 μA | |
| Overall accuracy | ± 1% (accuracy to the maximum value) | | | |
| Maximum conversion time | Maximum 4 ms/8 channels | | | |
| Output short protection | Provided | | | |
| Analog output points | 8 channels/module | | | |
| Insulation method | Photocoupler insulation between output terminals and PC power | | | |
| Offset/gain adjustment | Not provided | | | |
| Number of I/O points | Special, 32 | | | |
| Connection terminal | 20 point terminal block (M3.5 x 7 screw) | | | |
| Applicable wire size | 0.7 to 1.5 mm ² | | | |
| Applicable solderless terminal | R1 25-3, 1 25-YS3, RAV1 25-3, V1.25 YS3A | | | |
| Internal current consumption (5 VDC) | 0.65 A | | 0.85 A | |
| Weight kg (lb) | 0.28 (0.62) | | 0.28 (0.62) | |


*1: If the frequency of access from the PC CPU using FROM/TO instructions is high (e.g. scan time of 5 ms or less with access every scan) this can be extended up to about 6 ms

For the general specifications refer to the User's Manual for the PC CPU you are using

3. NOMENCLATURE AND SETTINGS

3. NOMENCLATURE AND SETTINGS

The name of each part of the A1S68DAV/DAI is indicated below

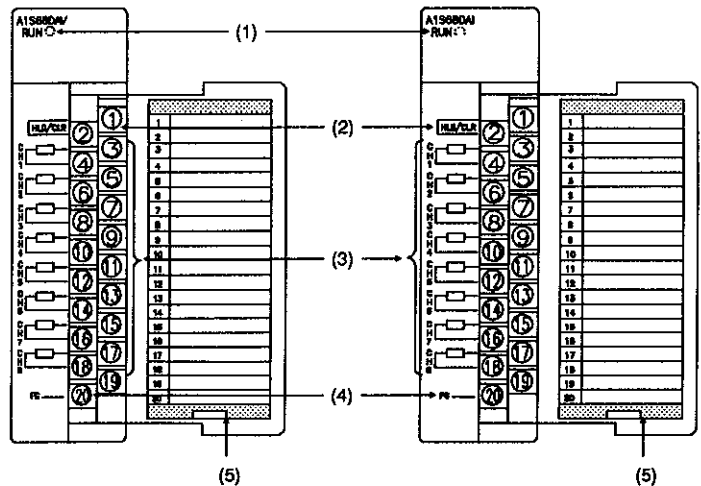

| No | Name and Appearance | Description | | | | | | | | | | | | | | | | | | | | |
|---------|--|--|--------------|--------------|---------|--------------|---|------|---|--------|---|------|---|--------|---|------|---|--------|---|-------|---|--------|
| (1) | RUN LED RUN () | LED that indicates the operating status of the A1S68DAV/DAI On : Normal operation Off : 5 VDC power supply cut, watchdog timer error, or PC CPU error Flashing : write data error | | | | | | | | | | | | | | | | | | | | |
| (2) | Analog output hold/clear setting terminals (terminal No. 1, 2) | Terminals that set the analog output status when the PC CPU is in the STOP status. The hold or clear status is set by shorting/opening the connection between terminals 1 and 2. When shorted : At a PC CPU STOP, the analog value before the STOP is output (HOLD) When open : At a PC CPU STOP, the analog value shown below is output (CLEAR) • A1S68DAV : 0 V • A1S68DAI : 4 mA | | | | | | | | | | | | | | | | | | | | |
| (3) | Analog output terminals (terminal No. 3 to 18) | Terminals that output the digital to analog converted values to external destinations in each channel <table border="1"> <thead> <tr> <th>Channel</th> <th>Terminal No.</th> <th>Channel</th> <th>Terminal No.</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>3, 4</td> <td>5</td> <td>11, 12</td> </tr> <tr> <td>2</td> <td>5, 6</td> <td>6</td> <td>13, 14</td> </tr> <tr> <td>3</td> <td>7, 8</td> <td>7</td> <td>15, 16</td> </tr> <tr> <td>4</td> <td>9, 10</td> <td>8</td> <td>17, 18</td> </tr> </tbody> </table> | Channel | Terminal No. | Channel | Terminal No. | 1 | 3, 4 | 5 | 11, 12 | 2 | 5, 6 | 6 | 13, 14 | 3 | 7, 8 | 7 | 15, 16 | 4 | 9, 10 | 8 | 17, 18 |
| Channel | Terminal No. | Channel | Terminal No. | | | | | | | | | | | | | | | | | | | |
| 1 | 3, 4 | 5 | 11, 12 | | | | | | | | | | | | | | | | | | | |
| 2 | 5, 6 | 6 | 13, 14 | | | | | | | | | | | | | | | | | | | |
| 3 | 7, 8 | 7 | 15, 16 | | | | | | | | | | | | | | | | | | | |
| 4 | 9, 10 | 8 | 17, 18 | | | | | | | | | | | | | | | | | | | |
| (4) | FG terminal (Terminal No. 20) | Frame ground terminal | | | | | | | | | | | | | | | | | | | | |
| (5) | Code sheet | Filled out to indicate the application of each terminal | | | | | | | | | | | | | | | | | | | | |

4. HANDLING

4. HANDLING

4.1 Cautions on Handling

- (1) The case of the A1S68DAV/DAI is made of resin. Do not drop it or subject it to strong impact.
- (2) Do not remove the printed circuit board from the case. This could cause failure.
- (3) Make sure that no wire offcuts or other debris enters the top of the module during wiring. If anything does enter the module, remove it.
- (4) Tighten the module mounting and terminal screws as specified below.

| Screw | Tightening Torque Range N cm (kg cm) [lb inch] |
|--|---|
| Module mounting screw (M4 screw) | 78 to 118 (8 to 12) [6.93 to 10.39] |
| Terminal block terminal screw (M3.5 screw) | 59 to 88 (6 to 9) [5.2 to 7.79] |
| Terminal block mounting screw (M4 screw) | 78 to 118 (8 to 12) [6.93 to 10.39] |

5. WIRING

The precautions and wiring method for making connection to external devices are as given below

5. WIRING

5.1 Wiring Instructions

In order for the A1S68DAV/DAI to realize its optimum performance, and to ensure reliable system operation, the external wiring must have minimum susceptibility to noise

The following cautions therefore apply when configuring the external wiring of the A1S68DAV/DAI


- (1) Do not bundle the external wiring together with main circuit or high-voltage lines, or load-bearing wires other than those of the PC

This will increase susceptibility to noise and the effects of surges and induction

- (2) Ground the shielding of shielded wires and shielded cables at one point

5.2 Module Connection Example


- (1) An example of the wiring to external devices in the case of an A1S68DAV is shown below

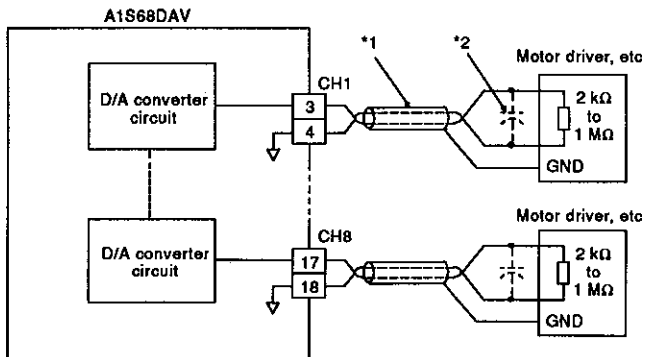

*1: Use two-core shielded wiring (twisted)

*2: If noise or ripple is generated by the external wiring, connect a 0.1 to 0.47 μF 25WV capacitor to the input terminal of the external device

- (2) An example of the wiring to external devices in the case of an A1S68DAI is shown below

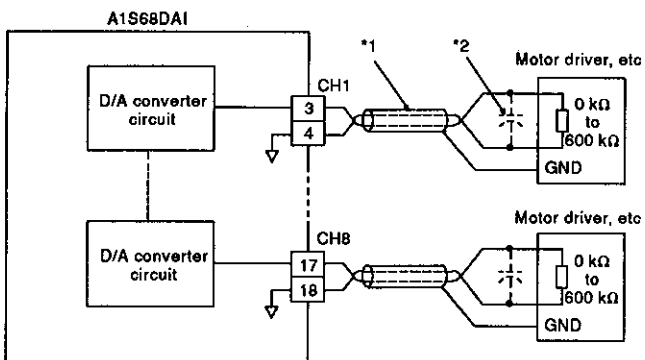


*1: Use two-core shielded wiring (twisted)

*2: If noise or ripple is generated by the external wiring, connect a 0.1 to 0.47 μF 25WV capacitor to the input terminal of the external device



IMPORTANT

A device with a shared current common line cannot be connected to an A1S68DAI. If such a device is connected, normal output will not be possible.

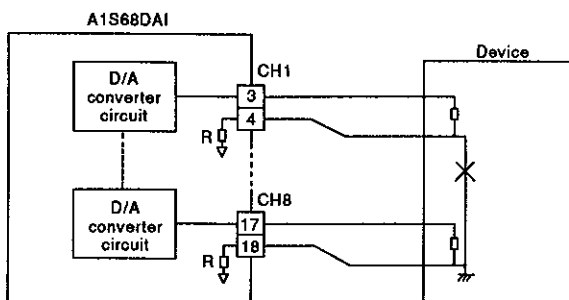

6. OUTSIDE DIMENSIONS

6. OUTSIDE DIMENSIONS

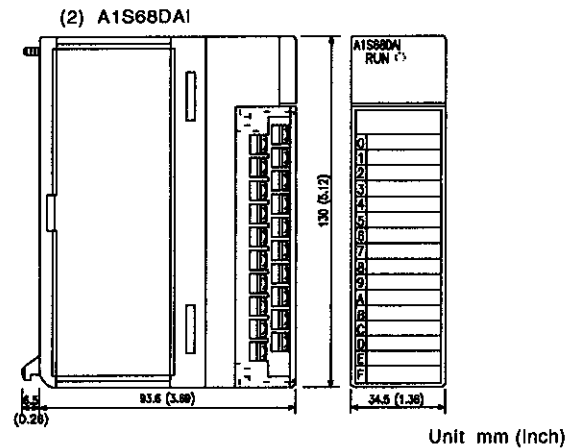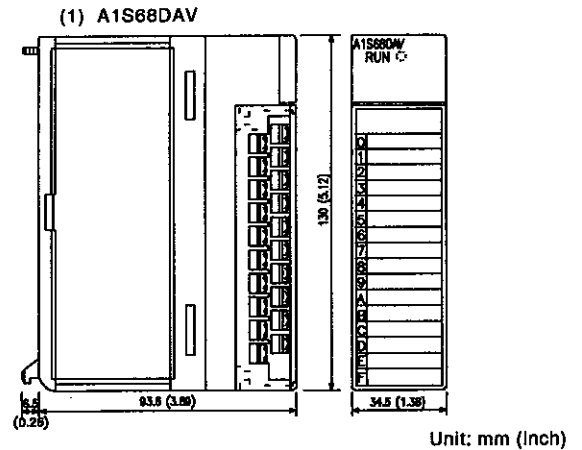

REVISIONS

| | |
|------------|--|
| A | |
| Aug., 1995 | |

IMPORTANT

- (1) Design the configuration of a system to provide an external protective or safety interlocking circuit for the PCs
- (2) The components on the printed circuit boards will be damaged by static electricity, so avoid handling them directly. If it is necessary to handle them, take the following precautions:
 - (a) Ground human body and work bench
 - (b) Do not touch the conductive areas of the printed circuit board and its electrical parts with ungrounded tools etc.

Under no circumstances will Mitsubishi Electric be liable or responsible for any consequential damage that may arise as a result of the installation or use of this equipment.

All examples and diagrams shown in this manual are intended only as an aid to understanding the text, not to guarantee operation. Mitsubishi Electric will accept no responsibility for actual use of the product based on these illustrative examples.

Owing to the very great variety in possible applications of this equipment, you must satisfy yourself as to its suitability for your specific application.