

MITSUBISHI

Control & Communication Link System Master/Local Module

User's Manual
(Hardware)

AJ61QBT11
A1SJ61QBT11

Thank you for buying the Mitsubishi general-purpose programmable logic controller MELSEC-QnA Series

Prior to use, please read both this manual and detailed manual thoroughly and familiarize yourself with the product.



MODEL	AJ61QBT11-U-H-JE
MODEL CODE	13JT19
IB(NA)-0800147-A(0007)MEE	

● SAFETY PRECAUTIONS ●

(Always read before starting use)

When using this equipment, thoroughly read this manual. Also pay careful attention to safety and handle the module properly.

These precautions apply only to this equipment.

Refer to the user's manual of the CPU module to use for a description of the PLC system safety precautions.

These "Safety Precautions" classify the safety precautions into two categories: "DANGER" and "CAUTION"



Procedures which may lead to a dangerous condition and cause death or serious injury, if not carried out properly.



Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by  CAUTION may also be linked to serious results.

In any case, it is important to follow the directions for usage.

Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

[DESIGN PRECAUTIONS]

DANGER

- Read Chapter 5 in this manual carefully for status of each station when the PLC CPU has stopped its operation and when a communication error occurred in the data link.
Configure an interlocking circuit in a sequence program using the communication status information (SB, SW) so that the safety of the overall system is always maintained.
Accident may occur due to output error or malfunctioning.
- The master station or local station cannot detect errors when a station specified as an error-invalidated station becomes communication error.

CAUTION

- Do not bundle, on install, the control cables and communication cables with, or near, main circuit and power cables. Keep them at least 100 mm (3.9 in.) away from such cables. Noise may cause erroneous operation.

[INSTALLATION PRECAUTIONS]

CAUTION

- Use the PLC in the environment given in the general specifications section of the User's manual for CPU module being used. Using the PLC outside the range of the general specifications may result in electric shock, fire or erroneous operation or may damage or degrade the product.
- Insert the tabs at the bottom of the module into the holes in the base unit before installing the module. Improper installation may cause erroneous operation, accidents, or the module to fall out.
- Do not touch the electronic parts or the module conduction area. It may cause erroneous operation or failure.

[WIRING PRECAUTIONS]

DANGER

- Before beginning any installation or wiring work, make sure all phases of the power supply have been obstructed from the outside. Failing to completely shut out the power supply phases could cause electrical shock and/or damage to the product.
- Following installation or wiring work, when turning on the power supply and operating the equipment, make sure the terminal cover provided as an accessory has been attached to the product.
Failure to attach the terminal covers may result in malfunction.

CAUTION

- Tighten the terminal screws to the specified torque. Loose terminal screws may cause a short circuit or erroneous operation.
- Be sure that cuttings, wire chips, or other foreign matter do not enter the module. Foreign matter may start a fire or cause an accident or erroneous operation.
- Be sure that the communication cable connected to the module is kept in the duct or is fixed with cramps.
Failure to do so may cause a damage to the module or cables due to dangling, shifting or inadvertent handling of cable, or malfunction because of bad cable contacts.
- Do not grab on the cable when removing the communication cable connected to the module.
When removing the cable with a connector, hold the connector on the side that is connected to the module.
When removing the cable without a connector, loose the screws on the side that is connected to the module.
Pulling the cable that is still connected to the module may cause malfunction due to bad cable contacts.

[STARTING AND MAINTENANCE PRECAUTIONS]

DANGER

- Do not touch terminals without obstructing all power supply from the outside.
It may cause malfunction.
- Turn off the power before cleaning the module or retightening the screws. Doing this work while the power is on may damage the module or cause erroneous operation.
- Do not disassemble or rebuild the module. It may cause accidents, erroneous operation, injury, or fire.
- Turn off the power before mounting and dismantling the module. Mounting or dismantling the module while the power is on may damage the module or cause erroneous operation.

[DISPOSAL PRECAUTIONS]

CAUTION

- When disposing of this product, treat it as industrial waste.

CONTENTS

1. Overview	1
1.1 Definition of Ver.1.10	2
2. Performance Specification	3
2.1 Performance specification.....	3
2.1.1 Maximum overall cable distance	4
2.2 CC-Link dedicated cable.....	4
3. Name and Setting of Each Component	5
4. Loading and Installation	9
4.1 Handling precautions	9
4.2 Installation environment.....	9
5. External Wiring	10
5.1 Wiring the CC-Link dedicated cable.....	10
6. External Dimensions	11
6.1 AJ61QBT11	11
6.2 A1SJ61QBT11.....	12

About the Manuals

The following product are available for this equipment.
Refer to the table given below to choose suitable manuals.

Related Manual

Manual name	Manual No. (Model code)
Control & Communication Link System Master/Local Module type AJ61QBT11/A1SJ61QBT11 User's Manual	IB-66722 (13J873)

Conformation to the EMC Directive and Low Voltage Instruction

When complying with EMC Directives and Low-Voltage Directives by assembling a Mitsubishi PLC compatible with EMC Directive and Low-Voltage Directives into the user product, refer to Chapter 3 "EMC Directives and Low-Voltage Directives" in the User's Manual (Hardware Section) for the CPU module being used. The CE logo is printed on the rating plate on the main body of the PLC that conforms to the EMC directive and low voltage instruction.

1. Overview

This manual describes the specifications, name of each part, settings, etc., of the AJ61QBT11 Control & Communication Link System Master/Local Module (hereafter abbreviated as AJ61QBT11) and A1SJ61QBT11 Control & Communication Link System Master/Local Module (hereafter abbreviated as A1SJ61QBT11) to be used in combination with the MELSEC-QnA series PLC CPU.

In this manual, Control & Communication Link is abbreviated as CC-Link.
Confirm if the following items are included in the package after unpacking.

Item name		Number of items
CC-Link System Master/Local Module type AJ61QBT11	AJ61QBT11 main module	1
	Terminal resistor 110Ω 1/2W (Brown-brown-brown)	2
	Terminal resistor 130Ω 1/2W (Brown-orange-brown)	2
CC-Link System Master/Local Module type A1SJ61QBT11	A1SJ61QBT11 main module	1
	Terminal resistor 110Ω 1/2W (Brown-brown-brown)	2
	Terminal resistor 130Ω 1/2W (Brown-orange-brown)	2

... Definition of Ver.1.10

The module of which the cable length between station and station is uniformly 20cm or more by improving the conventional limit of the cable length between station and station is defined as Ver.1.10.

The conventional modules are defined as Ver.1.00.

The conditions for setting the cable length between station and station uniformly to 20cm or more are indicated below.

- 1) All modules configuring the CC-Link system must use Version 1.10.
- 2) All data link cables must be Version 1.10 compatible CC-Link dedicated cable.

Point
The Ver.1.00 specifications are applied for the maximum total cable length and the cable length between station and station, when the CC-Link system is configured with the modules and cables of Ver.1.00 and Ver.1.10.

(1) Checking Version 1.10

The "CC-Link" logo is stamped on the "plate" for the Version 1.10 modules.

CC-Link

2. Performance Specification

2.1 Performance specification

The following shows the performance specification of the AJ61QBT11 and A1SJ61QBT11. Refer to the CPU module User's Manual to be used for general specification of AJ61QBT11 and A1SJ61QBT11.

Item	Specification
Transmission speed	156kbps/625kbps/2.5Mbps/5Mbps/10Mbps selectable
Maximum overall cable distance	It differs depending on transmission speed (Refer to Section 2.1.1)
Maximum number of modules that can be connected (when master station)	64 units However, the following conditions must be met: $\{(1 \times a) + (2 \times b) + (3 \times c) + (4 \times d)\} \leq 64$ a: The number of occupied modules by station 1. b: The number of occupied modules by station 2. c: The number of occupied modules by station 3. d: The number of occupied modules by station 4. $\{(16 \times A) + (54 \times B) + (88 \times C)\} \leq 2304$ A: Remote I/O station's numbers ≤ 64 B: Remote device station's numbers ≤ 42 C: Local station's, standby master station's and intelligent device station's numbers ≤ 26
Number of occupied stations (When local station)	1 station to 4 stations (Switched by DIP switch)
Maximum link points per system	Remote I/O (RX, RY): 2048 points Remote register (RWw): 256 points (master station \rightarrow remote/local station) Remote register (RWr): 256 points (remote/local station \rightarrow master station)
Link point per remote station/local station	Remote I/O (RX, RY): 32 points (local station 30 points) Remote register (RWw): 4 points (master station \rightarrow remote/local station) Remote register (RWr): 4 points (remote/local station \rightarrow master station)
Communication method	Ponging method
Synchronous method	Frame synchronous method
Signed method	NRZI method
Transmission path	Bus (RS-485)
Transmission format	Conform to HDLC
Error control system	CRC ($X^{16}+X^{12}+X^5+1$)
Cable	CC-Link dedicated cable/CC-Link dedicated high-performance cable /Version 1.10 compatible CC-Link dedicated cable*
RAS function	<ul style="list-style-type: none"> • Auto return function • Slave station cutoff function • Link special relay/Error detection by register
Parameter entry numbers for E ² PROM	10000 times
I/O occupied points number	32 points (I/O allocation: special 32 points)
Internal consumption current (5VDC) (A)	AJ61QBT11:0.45, A1SJ61QBT11:0.4
Weight [kg]	AJ61QBT11:0.4, A1SJ61QBT11:0.25

* The CC-Link dedicated cable and CC-Link dedicated high-performance cable cannot be used together.

Also attach the terminator which matches the kind of the cable.

2.1.1 maximum overall cable distance

The maximum overall cable distance differs according to the transmission speed.

For the relationship between the transmission speed and maximum overall cable distance, refer to CC-Link Catalog.

2.2 CC-Link dedicated cable

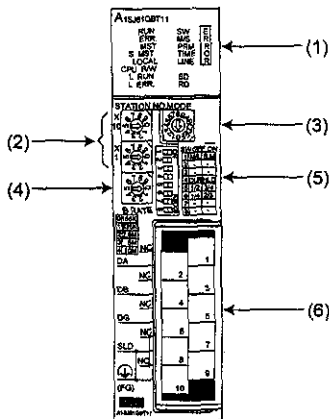
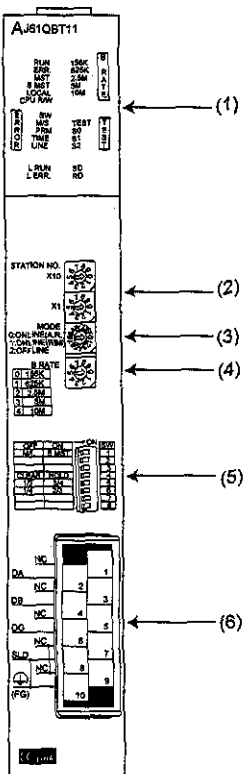
Use the CC-Link dedicated cables in a CC-Link system.

The performance of the CC-Link system cannot be guaranteed with cables other than the CC-Link dedicated cables.









For the specifications of the CC-Link dedicated cable and the reference office, refer to CC-Link catalog.

3. Name and Setting of Each Component

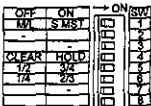
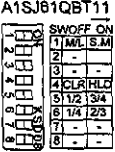
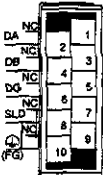
This section explains the name and setting of each component of AJ61QBT11 and A1SJ61QBT11.



Number	Description																																					
(1)	LED display																																					
	Data link status can be confirmed by LED's ON state.																																					
	<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p>AJ61QBT11</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">RUN</td> <td style="width: 20%;">156K</td> <td style="width: 30%;"></td> </tr> <tr> <td>ERR.</td> <td>625K</td> <td></td> </tr> <tr> <td>MST</td> <td>2.5M</td> <td></td> </tr> <tr> <td>S MST</td> <td>5M</td> <td></td> </tr> <tr> <td>LOCAL</td> <td>10M</td> <td></td> </tr> <tr> <td>CPU R/W</td> <td></td> <td></td> </tr> </table> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%;"></td> <td style="width: 33%;">SW</td> <td style="width: 33%;">TEST</td> </tr> <tr> <td></td> <td>M/S</td> <td>S0</td> </tr> <tr> <td></td> <td>PRM</td> <td>S1</td> </tr> <tr> <td></td> <td>TIME</td> <td>S2</td> </tr> <tr> <td></td> <td>LINE</td> <td></td> </tr> </table> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">L RUN</td> <td style="width: 50%;">SD</td> </tr> <tr> <td>L ERR.</td> <td>RD</td> </tr> </table> </div>	RUN	156K		ERR.	625K		MST	2.5M		S MST	5M		LOCAL	10M		CPU R/W				SW	TEST		M/S	S0		PRM	S1		TIME	S2		LINE		L RUN	SD	L ERR.	RD
	RUN	156K																																				
	ERR.	625K																																				
	MST	2.5M																																				
	S MST	5M																																				
	LOCAL	10M																																				
	CPU R/W																																					
		SW	TEST																																			
		M/S	S0																																			
		PRM	S1																																			
		TIME	S2																																			
		LINE																																				
	L RUN	SD																																				
	L ERR.	RD																																				
	<div style="border: 1px solid black; padding: 5px;"> <p>A1SJB1QBT11</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">RUN</td> <td style="width: 20%;">SW</td> <td style="width: 30%;"></td> </tr> <tr> <td>ERR.</td> <td>M/S</td> <td></td> </tr> <tr> <td>MST</td> <td>PRM</td> <td></td> </tr> <tr> <td>S MST</td> <td>TIME</td> <td></td> </tr> <tr> <td>LOCAL</td> <td>LINE</td> <td></td> </tr> <tr> <td>CPU R/W</td> <td></td> <td></td> </tr> <tr> <td>L RUN</td> <td>SD</td> <td></td> </tr> <tr> <td>L ERR.</td> <td>RD</td> <td></td> </tr> </table> </div>	RUN	SW		ERR.	M/S		MST	PRM		S MST	TIME		LOCAL	LINE		CPU R/W			L RUN	SD		L ERR.	RD														
	RUN	SW																																				
	ERR.	M/S																																				
	MST	PRM																																				
	S MST	TIME																																				
	LOCAL	LINE																																				
	CPU R/W																																					
	L RUN	SD																																				
L ERR.	RD																																					
LED display	Description																																					
RUN	ON: When module is normal. OFF: When watchdog timer error.																																					
ERR.	ON: All stations communication error. Blink: Communication error occurred in the station.																																					
MST	ON: It is set at the master station.																																					
S MST	ON: It is set at the standby master station.																																					
LOCAL	ON: It is set at the local station.																																					
CPU R/W	ON: It is communicating with PLC CPU. (FROM/TO)																																					
E R R O R	SW	ON: Settings for switches are not normal.																																				
	M/S	ON: Master station is overlapped on the line.																																				
	PRM	ON: An error occurred in the parameter content.																																				
	TIME	ON: Data link monitor timer is started.																																				
	LINE	ON: Cables are disconnected or transmission path is affected by noise, etc.																																				
L RUN	ON: Data link is operating. (host station).																																					
L ERR.	ON: Communication error (host station). Blink: The settings of switches 2 to 5 are changed during the power supply ON.																																					
B R A T E	156K	ON: When transmission speed is set to "156kbps"																																				
	625K	ON: When transmission speed is set to "625kbps"																																				
	2.5M	ON: When transmission speed is set to "2.5Mbps"																																				
	5M	ON: When transmission speed is set to "5Mbps"																																				
	10M	ON: When transmission speed is set to "10Mbps"																																				
T E S T	TEST	ON: Offline test in progress.																																				
	S0	Not used																																				
	S1																																					
	S2																																					
SD	ON: Data being sent.																																					
RD	ON: Data being received.																																					

Number	Name	Description																																		
(2)	Station number setting switch AJ61QBT11 STATION NO. X10  X1  A1SJ61QBT11 STATION NO. X10  X1 	Set the module station number.(Setting status when shipped: 0) <Setting range> • When remote net mode Master station: 0 Local station: 1 to 64 When set to a number not in the range 0 to 64, the "SW" and "L ERR." LEDs are turned on. • When remote I/O net mode Master station: 1 to 64 (set last station number of remote I/O station) When set to 0, the "PLM" LED is turned on.																																		
(3)	Mode setting switches AJ61QBT11 MODE  0:ONLINE(A.R.) 1:ONLINE(RIM) 2:OFFLINE A1SJ61QBT11 MODE 	Set the operation status of the module (Setting status when shipped: 0) <table border="1"> <thead> <tr> <th>Number</th> <th>Names</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Online (remote net mode)</td> </tr> <tr> <td>1</td> <td>Online (remote I/O net mode)</td> </tr> <tr> <td>2</td> <td>Offline</td> </tr> <tr> <td>3</td> <td>Line test 1 *1</td> </tr> <tr> <td>4</td> <td>Line test 2 *1</td> </tr> <tr> <td>5</td> <td>Parameter confirmation test *1</td> </tr> <tr> <td>6</td> <td>Hardware test</td> </tr> <tr> <td>7</td> <td>Setting error ("SW" LED turn on)</td> </tr> <tr> <td>8 to A</td> <td>Setting prohibited due to internal use</td> </tr> <tr> <td>B to F</td> <td>Setting error ("SW" LED turn on)</td> </tr> </tbody> </table>	Number	Names	0	Online (remote net mode)	1	Online (remote I/O net mode)	2	Offline	3	Line test 1 *1	4	Line test 2 *1	5	Parameter confirmation test *1	6	Hardware test	7	Setting error ("SW" LED turn on)	8 to A	Setting prohibited due to internal use	B to F	Setting error ("SW" LED turn on)												
Number	Names																																			
0	Online (remote net mode)																																			
1	Online (remote I/O net mode)																																			
2	Offline																																			
3	Line test 1 *1																																			
4	Line test 2 *1																																			
5	Parameter confirmation test *1																																			
6	Hardware test																																			
7	Setting error ("SW" LED turn on)																																			
8 to A	Setting prohibited due to internal use																																			
B to F	Setting error ("SW" LED turn on)																																			
(4)	Transmission speed setting switches AJ61QBT11 B RATE  <table border="1"> <tbody> <tr> <td>0</td> <td>156K</td> </tr> <tr> <td>1</td> <td>825K</td> </tr> <tr> <td>2</td> <td>2.5M</td> </tr> <tr> <td>3</td> <td>5M</td> </tr> <tr> <td>4</td> <td>10M</td> </tr> </tbody> </table> A1SJ61QBT11  B RATE <table border="1"> <tbody> <tr> <td>0</td> <td>156K</td> </tr> <tr> <td>1</td> <td>825K</td> </tr> <tr> <td>2</td> <td>2.5M</td> </tr> <tr> <td>3</td> <td>5M</td> </tr> <tr> <td>4</td> <td>10M</td> </tr> </tbody> </table>	0	156K	1	825K	2	2.5M	3	5M	4	10M	0	156K	1	825K	2	2.5M	3	5M	4	10M	Set transmission status of the module (Setting status when shipped: 0) <table border="1"> <thead> <tr> <th>Number</th> <th>Descriptions</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>156kbps</td> </tr> <tr> <td>1</td> <td>625kbps</td> </tr> <tr> <td>2</td> <td>2.5Mbps</td> </tr> <tr> <td>3</td> <td>5Mbps</td> </tr> <tr> <td>4</td> <td>10Mbps</td> </tr> <tr> <td>5 to 9</td> <td>Setting error ("SW" or "L ERR" LED turn on)</td> </tr> </tbody> </table>	Number	Descriptions	0	156kbps	1	625kbps	2	2.5Mbps	3	5Mbps	4	10Mbps	5 to 9	Setting error ("SW" or "L ERR" LED turn on)
0	156K																																			
1	825K																																			
2	2.5M																																			
3	5M																																			
4	10M																																			
0	156K																																			
1	825K																																			
2	2.5M																																			
3	5M																																			
4	10M																																			
Number	Descriptions																																			
0	156kbps																																			
1	625kbps																																			
2	2.5Mbps																																			
3	5Mbps																																			
4	10Mbps																																			
5 to 9	Setting error ("SW" or "L ERR" LED turn on)																																			

*1: Use impossible at local station.

Number	Name	Description																																																		
(5)	Condition setting switches AJ61QBT11  A1SJ61QBT11 	Set the operation condition (Setting status when shipped: All is off)																																																		
		<table border="1"> <thead> <tr> <th>Number</th> <th>Setting contents</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>SW1</td> <td>Station type</td> <td>OFF: Master station/Local station ON: Standby master station</td> </tr> <tr> <td>SW2</td> <td>(Unusable)</td> <td>Always OFF</td> </tr> <tr> <td>SW3</td> <td>(Unusable)</td> <td>Always OFF</td> </tr> <tr> <td>SW4</td> <td>Input data status of the data link error station</td> <td>OFF: Clear ON: Hold</td> </tr> <tr> <td>SW5</td> <td rowspan="4">Number of occupied station</td> <td>Number of occupied station</td> <td>SW5</td> <td>SW6</td> </tr> <tr> <td>SW6</td> <td>1 station</td> <td>OFF</td> <td>OFF</td> </tr> <tr> <td></td> <td>2 stations</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td></td> <td>3 stations</td> <td>ON</td> <td>ON</td> </tr> <tr> <td></td> <td></td> <td>4 stations</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td></td> <td>SW7</td> <td>(Unusable)</td> <td colspan="3">Always OFF</td> </tr> <tr> <td></td> <td>SW8</td> <td>(Unusable)</td> <td colspan="3">Always OFF</td> </tr> </tbody> </table>	Number	Setting contents	Description	SW1	Station type	OFF: Master station/Local station ON: Standby master station	SW2	(Unusable)	Always OFF	SW3	(Unusable)	Always OFF	SW4	Input data status of the data link error station	OFF: Clear ON: Hold	SW5	Number of occupied station	Number of occupied station	SW5	SW6	SW6	1 station	OFF	OFF		2 stations	OFF	ON		3 stations	ON	ON			4 stations	ON	OFF		SW7	(Unusable)	Always OFF				SW8	(Unusable)	Always OFF			
		Number	Setting contents	Description																																																
		SW1	Station type	OFF: Master station/Local station ON: Standby master station																																																
		SW2	(Unusable)	Always OFF																																																
		SW3	(Unusable)	Always OFF																																																
		SW4	Input data status of the data link error station	OFF: Clear ON: Hold																																																
		SW5	Number of occupied station	Number of occupied station	SW5	SW6																																														
		SW6		1 station	OFF	OFF																																														
				2 stations	OFF	ON																																														
	3 stations	ON		ON																																																
		4 stations	ON	OFF																																																
	SW7	(Unusable)	Always OFF																																																	
	SW8	(Unusable)	Always OFF																																																	
(6)	Terminal block 	Connecting the CC-Link dedicated cable of data link. The terminals showing below are connected inside the module. <ul style="list-style-type: none"> • SLD (Terminal No. 8) and FG (Terminal No. 10) • NC (Terminal No. 7) and NC (Terminal No. 9) 2-piece type terminal block. The module can be exchanged with another without removing the signal lines from the terminal block.																																																		

Point

- When the module is operated in synchronous mode, there may be occasions when the "L RUN" LED is only faintly lit.
- The setting contents for the switches (2) to (5) are valid when the module power supply status is OFF → ON.
When the setting contents are changed while the module power supply is ON, reset PLC CPU or turning the module power supply ON to OFF again.

Important

Do not use station number 64 in a system where the waiting master station exists.

When it is used, the station number 64 will not communicate correctly.

4. Loading and Installation

The following is explanations of the handling precautions and installation environment which is common to modules when handling AJ61QBT11 and A1SJ61QBT11 from unpacking to installation.

For the details of loading and installation of the module, refer to User's Manual of PLC CPU module to be used.

4.1 Handling precautions

The following is an explanation of handling precautions of the module.

- (1) Because the case of the module is made of resin, be careful not to drop it or expose it to strong impact.
- (2) Execute tightening of the module's installation screws within the range indicated below.

Screw location	Tightening torque range
Module installation screws (M4 screws)	78 to 118N·cm
Terminal-block terminal screws (M3.5 screws)	59 to 88N·cm
Terminal-block installation screws (M3.5 screws)	49 to 78N·cm

Point
Always turn the power of the corresponding station OFF before mounting or removing the terminal block. If the terminal block is mounted or removed without turning the corresponding station's power OFF, correct data transmission by the mounted or removed station will not be guaranteed.

4.2 Installation environment

For more details on the installation environment, refer to the user's manual for the PLC CPU module used.

5. External Wiring

5.1 Wiring the CC-Link dedicated cable

The connection method of the CC-Link dedicated cables for the master module, local module, standby master module, remote module and intelligent module are described.

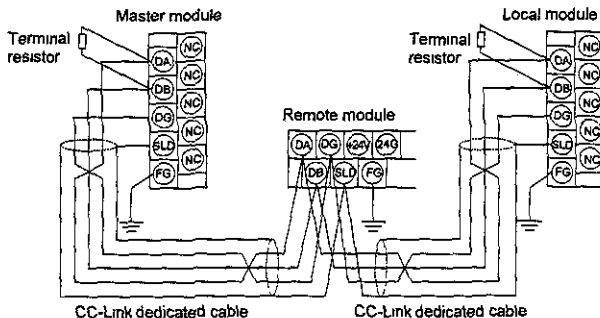
- (1) Connections can be made regardless of the station numbers.
- (2) Always connect "terminal resistors" supplied with the module to the modules at both ends and between "DA" and "DB"
- (3) In the CC-Link system, the terminal resistor that is connected differs depending on the cable used.
 - When the CC-Link dedicated cable and the Version 1.10 compatible CC-Link dedicated cable are used:
110Ω 1/2W (brown-brown-brown)
 - When the CC-Link dedicated high-performance cable is used:
130Ω 1/2W (brown-orange-brown)
- (4) The master module can be connected besides to the ends.
- (5) A star connection cannot be used.
- (6) The connection method is shown below.

Important

The CC-Link dedicated cable and CC-Link dedicated high-performance cable cannot be used together. If used together, correct data transmission will not be guaranteed.

Point

The shielded CC-Link dedicated cable should go through "SLD" and "FG" in each module, and both ends should be grounded (class-D grounding). SLD and FG are connected inside the module.



Warranty

Mitsubishi will not be held liable for damage caused by factors found not to be the cause of Mitsubishi; machine damage or lost profits caused by faults in the Mitsubishi products; damage, secondary damage, accident compensation caused by special factors unpredictable by Mitsubishi; damages to products other than Mitsubishi products; and to other duties.

⚠ For safe use

- This product has been manufactured as a general-purpose part for general industries, and has not been designed or manufactured to be incorporated in a device or system used in purposes related to human life.
- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Country/Region	Sales office/Tel	Country/Region	Sales office/Tel
U.S.A	Mitsubishi Electric Automation Inc. 500 Corporate Woods Parkway Vernon Hills, IL 60081 Tel: 1-847-478-2100	China	Ryoden International Shanghai Ltd. 3F Block5 Building Automation Instrumentation Plaza 103 Cao Bao Rd. Shanghai 200233 China Tel: 86-21-6475-3228
Brazil	MELCO-TEC Rep. Com. e Assessoria Técnica Ltda. Av. Rio Branco, 123-15 and S/1507, Rio de Janeiro, RJ CEP 20040-005, Brazil Tel: 55-21-221-8343	Tawan	Setuayo Enterprise Co., Ltd. 8F., No.105 Wu-Kung 3rd.RD, Wu-Ku Hsiang, Taipei Hsiang, Taiwan R.O.C. Tel: 866-2-2299-2499
Germany	Mitsubishi Electric Europe B.V. German Branch Gothaer Strasse 6 D-40880 Ratingen, GERMANY Tel: 49-2102-486-0	Korea	STC Techno Seoul Co., Ltd. 1F Dong Seo Game Channel Bldg., 660-11, Deungchon-dong Kangseok-ku, Seoul, Korea Tel: 82-2-3888-6597
U.K	Mitsubishi Electric Europe B.V. UK Branch Travellers Lane, Hatfield, Herts., AL10 8XB, UK Tel: 44-1707-278100	Singapore	Mitsubishi Electric Asia Pte. Ltd. 307 ALEXANDRA ROAD #05-01/02, MITSUBISHI ELECTRIC BUILDING SINGAPORE 159043 Tel: 65-473-2480
Italy	Mitsubishi Electric Europe B.V. Italian Branch Centro Dir. Colleoni, Pal. Perseo - Ingr.2 Via Paracelso 12, 20041 Agrate B., Milano, Italy Tel: 39-039-8053301	Thailand	F. A. Tech Co., Ltd. 1138/33-34 Rama 3 Road, Yannawa, Bangkok 10120, Thailand Tel: 66-2-295-2861
Spain	Mitsubishi Electric Europe B.V. Spanish Branch Pol. Ind. "Can Magi" - C/ Joan Bustalla, 2-4-A, C.420 08190 Sant Cugat del Valles, Barcelona, Spain Tel: 34-935-653135	Indonesia	P.T. Autotekindo SUMBER MAKMUR Kompleks Agung Sedayu Propertindo (Harco Mangga Dua) Blok H No.4 Jl Mangga Dua Raya Jakarta Pusat 10730-Indonesia. Tel: 62-21-338292
South Africa	MSA Manufacturing (Pty) Ltd. P O Box 39733 Bramley 201 8 Johannesburg, South Africa Tel: 27-11-444-8080	India	Messung Systems Pvt.Ltd. Electronic Sadan No:111 Unit No15, M.I.D.C BHOSARI,PUNE-411028 Tel: 91-20-7126927
Hong Kong	Ryoden International Ltd. 10th Floor, Manulife Tower, 169 Electric Road, North Point, HongKong Tel: 852-2867-8670	Australia	Mitsubishi Electric Australia Pty. Ltd. 348 Victoria Road, PostalBag, No 2, Rydalmere, N.S.W 2116, Australia Tel: 61-2-9684-7777

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: MITSUBISHI DENKO BLDG MARUUCHI TOKYO 100-8510 TEL: 03-5561-3111 FAX: 03-5561-3111
NADEYA TORRE 1-14, YAGI-MACHU 8, NAGATSUKU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry of International Trade and Industry for service transaction permission.

Specifications subject to change without notice.
Printed in Japan on recycled paper.